



TECHNICAL SHEET

ACCESSORIES

Adjustable cord weights are usually necessary to ensure a good working of the level control and monitoring floats. Fastened halfway between the switching-on and the switching-off levels, they keep cable properly stretched.

When a weight is supplied with a float, like for SOBAs, it is fastened 30 cm away from the float.

As the weight can slide along the cable, it is always possible to change its position if needed in case of liquid turbulence.

Cord hanger is an inexpensive but very useful accessory, highly recommended because it helps preventing damage to cables.



THE BALLASTS

The cable ballasts are necessary to the good working of the different appliances. They allow the cable to remain taut and are the float rotation point according to the level of liquids.



INTRINSIC SAFETY RELAYS

Depending on the hazardous areas, these relays must be used with the CE Ex appliances...



CABLE CLAMP