

HEAD-MOUNTED TEMPERATURE TRANSMITTER TYPE AT



- ✓ Galvanic insulation (In, out)
- ✓ Programmable sensor type PT100 i Ni100
- ✓ Programmable measuring range.
- ✓ Resistant thermoresistance line compensation (3 wire line)
- ✓ Output signal 4...20mA
- ✓ head-mounting system.

Application and function


The temperature economical transmitter AT is applicable to converting resistance of temperature sensor to standard current signal 4...20mA.

Most of parameters such as: sensor type, input signal, measuring range may be adapted by user for specific requirements of his measuring system. The transmitter is programmed using PC with RS converter and Aplisens AT configuration software.

If you define type of sensor, measuring range in the order, then the transmitter is programmed with required parameters and their values are printed on serial number label.

Transmitter for head mounting.


Electrical diagrams

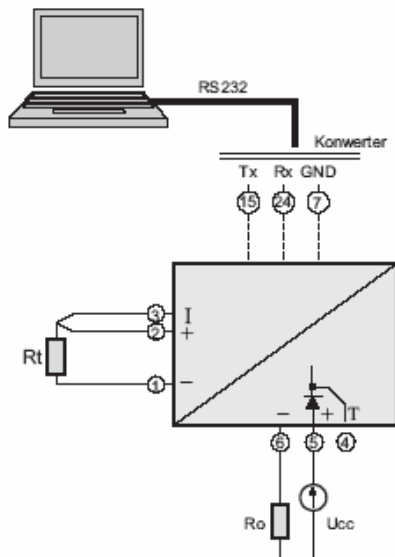

Technical data

Input signal	Pt 100, Ni 100
Limit process	20Ω < R < 380Ω
Min. measuring range	10 Ω
Output signal	4 – 20 mA
Power supply	10...36V DC
Load resistance	$R_{d[k\Omega]} < (U_z - 7V) / 25mA$
Alarm signal	23mA or 3,8mA
Accuracy for ΔR > 20Ω	± 0,2%
Thermal error	± 0,1% / 10°C
Ambient temperature	-25...+80°C
Error due to supply voltage changes	±0,1%

Ordering procedure.

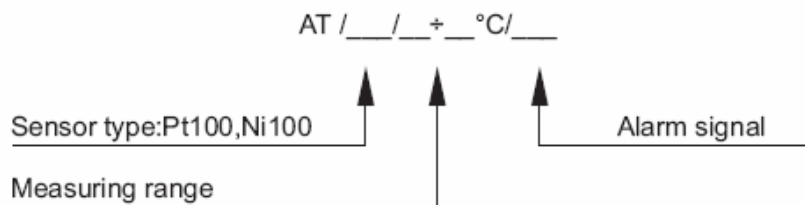

Example: temperature transmitter AT, sensor type Pt100, measuring range 0...100°C, alarm signal 23mA.

AT/Pt100/ 0...100°C/23mA